

Hisense E70 Pro (HLTE263E)

User Manual

Before using your phone, read the User Manual thoroughly.

Manufactured by Hisense International Co., Ltd.

Contents

Phone Basics

Your phone at a glance	5
Carrying out basic operations	6
Using the notification center	11
Using SIM and MicroSD cards	12
Battery charging	13

Troubleshooting

I can't turn my phone on	16
My phone keeps turning off automatically	16
I can't use an application on my phone	16
My phone's standby time is too short	17
My phone isn't charging properly	18
Touchscreen error when charging	18
I've forgotten my password	18
My PIN is locked	19
I can't use the Internet or make calls	19
My calls don't connect	19
Phone doesn't make a sound when it rings	20

Phone

Making calls	20
Making calls from contacts	20
Making calls from recents	20

Contacts

Importing contacts	21
Creating contacts	21
Searching for contacts	21

Messages

Sending messages	22
Viewing messages	22

Camera

Taking photos	23
Taking panorama	23
Recording videos	23




Photos

Viewing photos or videos	24
Deleting photos or videos	24

Sharing photos or videos	24
Chrome	
Using Chrome	25
Clock	
Alarm	25
Clock	26
Timer	26
Stopwatch	26
Sound Recorder	
Recording sound	27
Playing a recording	27
Managing recordings	27
Calculator	
Making calculation	28
FM Radio	
Listening to radio	28
Security and Privacy	
Fingerprint unlock	28
Face unlock	30
Safety	
Safety precautions	31
Safe battery charging	35
Protecting your hearing	35
Protecting the environment	35
Specific Absorption Rate(SAR)	36
Reducing your radiation exposure	36
Other important information	37
Disclaimer	38
Frequency bands and power	40
Compliance	41
EU Declaration of Conformity(DoC)	42

Safety symbols in this document

The following symbols are used throughout this document:

 
	Warning: situations that could cause injury to yourself or others.
	Caution: situations that could cause damage to your device or other equipment.
	Notice: notes, usage tips, or additional information.

Phone Basics

Use the information in this section to get to know your phone better.

Your phone at a glance

Get to know your phone with the following figure and legend.

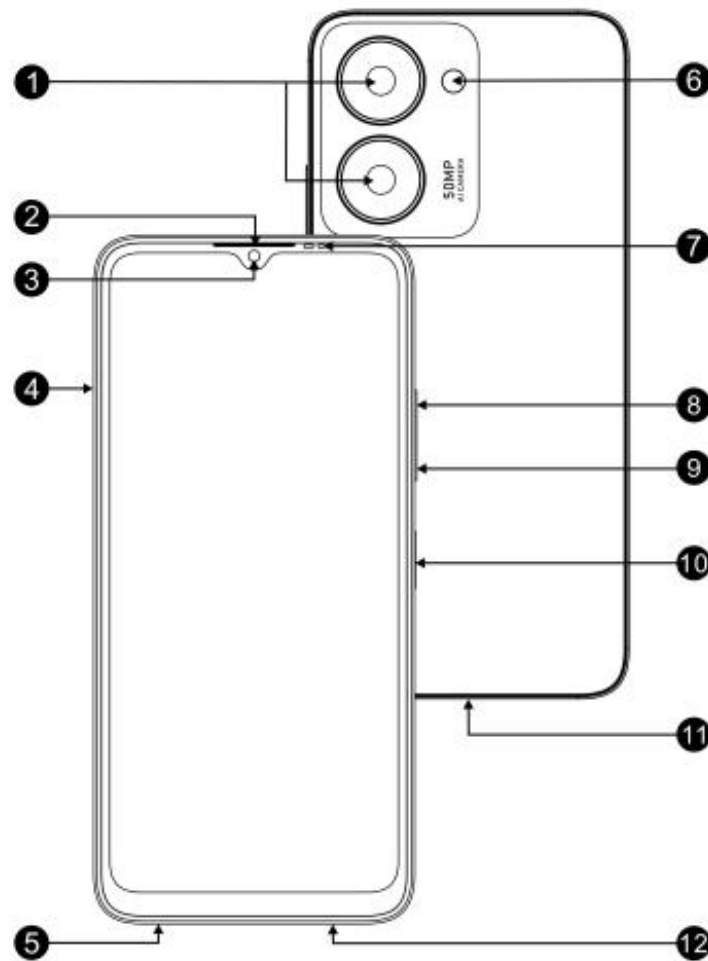

1.Dual-rear camera	7.Ambient light
2.Receiver	8.Volume button +
3.Front camera	9.Volume button -
4.Card slots	10.Power button
5.Microphone	11.USB
6.Flashlight	12.Speaker



The figures and descriptions are for reference only, please refer

to the descriptions of actual product.

Carrying out basic operations

This section describes how to carry out basic functions on your phone.




Before using your phone for the first time, fully charge your battery. For more information on charging your battery, see **Battery charging**.

Turning your phone on

- To turn your phone on, press and hold the power button until the screen turns on.
- When turning your phone on for the first time, or after performing data reset, follow the onscreen instructions to set up you phone.
- To force restart your phone, press and hold the power button until your phone vibrates.

Turning your phone off

To power off your phone, hold the power button and the volume up button at same time, and then tap the icon .

Long press the shutdown button for more than 5 seconds to pop up the shutdown box to achieve shutdown.

Press and hold the power button of the mobile phone for 10 seconds to shut down, and continue to press and hold to restart.

 
Using touchscreen gestures

This section describes how to use touchscreen gestures to help

control your phone.

Tapping

To open an app, to choose a menu item, to press an on-screen button, or to enter a character using the keyboard on the screen, tap it with

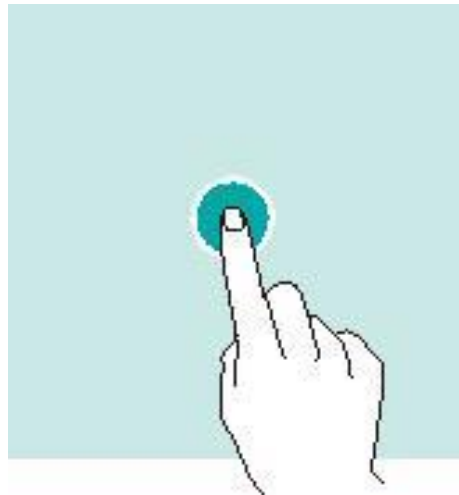

your finger.

 
 
Tapping and holding

Tap and hold an item on the screen for more than 2 seconds to access available options.





Swiping

Swipe to the left or right on the home screen or the Apps screen to

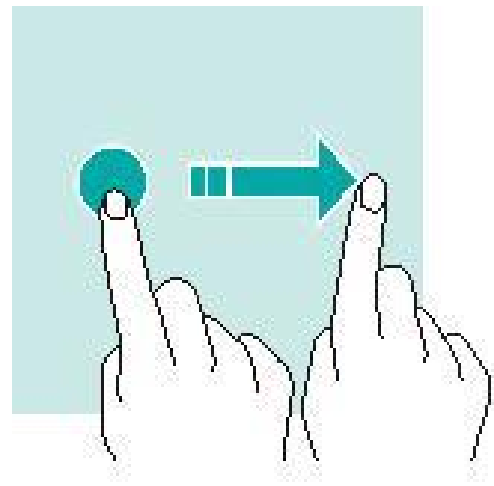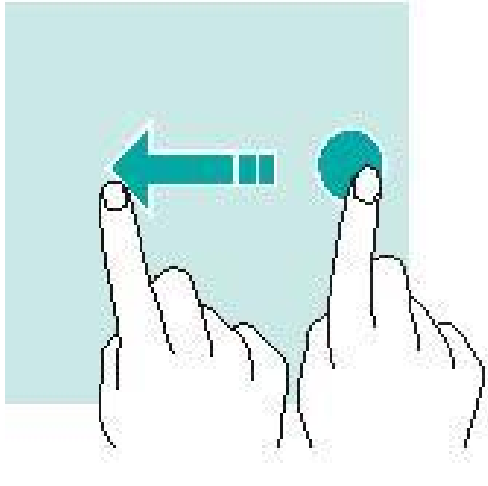


view other panels.

  Swipe upwards or downwards to scroll through a web page or a list of items.

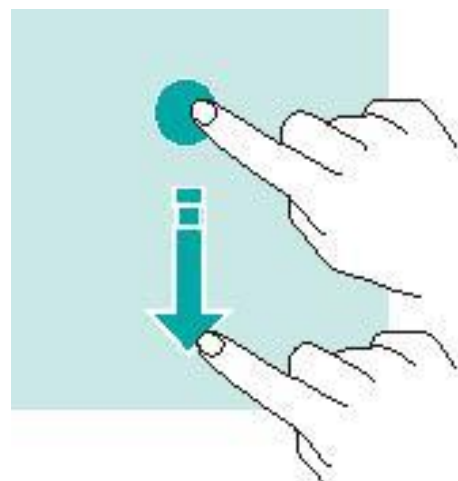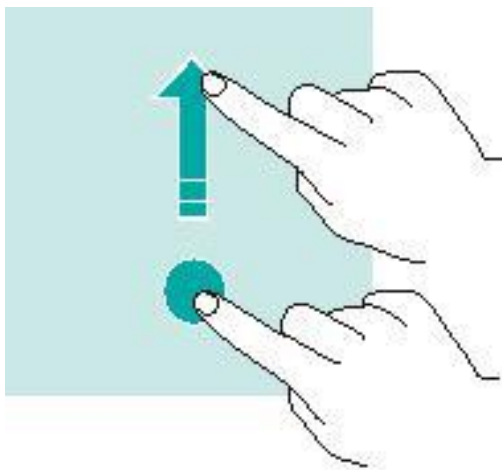


Spreading and pinching

 Spread two fingers apart on a web page, map or image to zoom in a part.

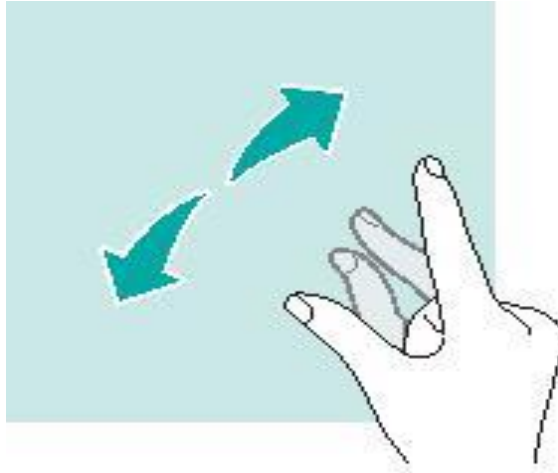


Pinch to zoom out.

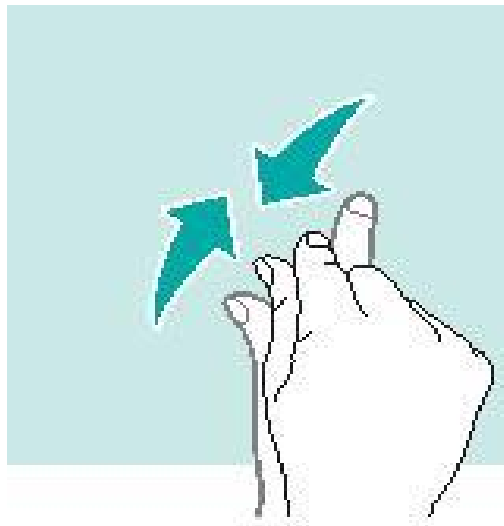 

Dragging

 To move an item, tap and hold it and drag it to the target position.

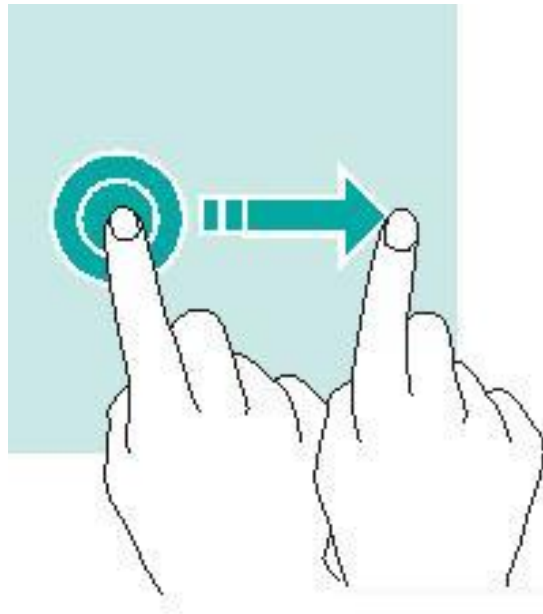

Using the navigation bar

You can find your navigation bar control at the bottom of you screen.

- To go back to the home screen, tap ● .
- To open the list of recent apps, tap ■ .
- To go back to the previous screen, tap ◀ .

Locking and unlocking screen

Locking the screen

- To lock the screen, press the power button.
- Go to **Settings > Display > Screen timeout** to change how quickly your screen goes to sleep. The screen locks and goes into sleep

mode when you don't use your phone for a while. This is to save power and stop accidental phone use.

Unlocking the screen

To unlock the screen, press the power button and swipe up.

 
Using the notification center

The notification center is where you can view the latest notifications relating to the operation of your phone.


Opening the notification center

To open and view the notification center:

- 1** Swipe down from the top of the screen to see the notification center.
- 2** Swipe down again from the top of the screen to see the shortcuts tab.

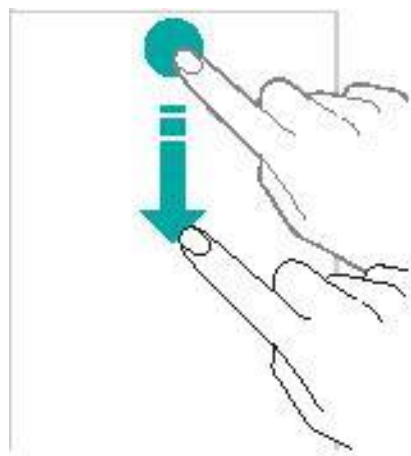

Closing the notification center

Swipe up or tap  to close the notification center.

Setting notification options

 
To set notification options, go to **Settings > Notifications**.

Using SIM and MicroSD cards

Inserting SIM and MicroSD cards

Always ensure that SIM and MicroSD cards are inserted correctly into your phone.

The following figure shows the correct way to insert SIM and MicroSD cards into your phone.

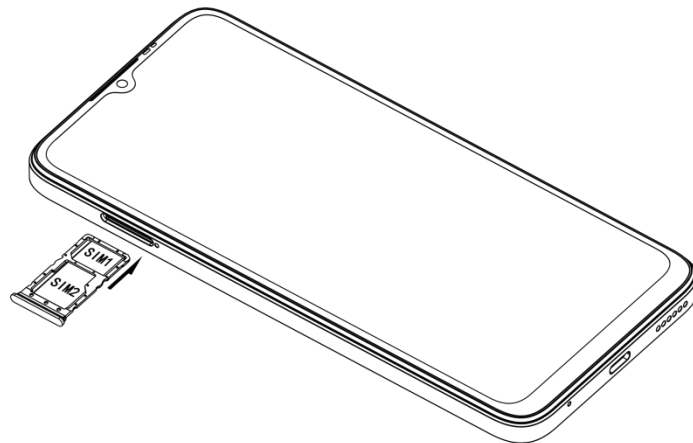

Make sure the card is properly aligned before inserting.



Do not use cut or modified SIM or MicroSD cards with your phone, as these may not be recognized.

Battery charging

Follow instructions in this section to charge your battery safely and preserve battery life.

Charging your battery

Fully charge the battery before using it for the first time, or when the phone has not been used for a long time, or when the battery is low.

To charge your battery, do the following:

1 Connect your USB charging cable to your USB power adapter.

Plug the end of the USB cable into the USB port, and the USB power adapter into a power socket.

2 Once your battery is fully charged, disconnect your phone from your USB charging cable.

Important safety precautions

The following precautions are extremely important and must be followed at all times:



Risk of explosion if battery is replaced by an incorrect type.

Dispose of used batteries according to the instructions.

To charge your phone safely, it is also important to pay attention to the following points:

- Use only approved chargers, batteries, and cables. Using an unapproved or incompatible power adapter, charger, or battery may damage your phone, shorten its lifespan, or cause a fire, explosion or other hazards.
- Avoid using your phone when it is charging. Do not cover your phone or power adapter.
- Connect your charger properly. Not connecting your charger properly can cause serious damage to your phone. Any damage caused by misuse is not covered by the warranty.
- Your phone can be safely charged at temperatures between 0°C and 40°C. Charging in environment where the temperature is below 0°C or higher than 40°C will harm battery. Performance and shorten battery life. Regular, long-term charging in extreme temperatures will damage your battery.
- Unplug your charger from the electric socket when not charging your phone.

Protecting your battery

For safe and effective charging that also protects your battery, you must also pay attention to the following points:

- If your AC power supply is lower voltage, or you charge from computer or other non-standard sources, you may need to charge your phone for longer.
- Your phone might not start straight away if the battery is low. Your phone will start normally once it has charged for a short while.
- The time your phone needs to charge may depend on room temperature and your battery level.
- The phone and charger may heat while charging. This is normal and shouldn't affect your phone's lifespan or performance. If your battery becomes much hotter than usual, stop charging your phone and put it in a cool place. If your phone surface is hot, avoid touching your phone for too long.

Troubleshooting

This section lists common problems you may have when using your phone. Check to see whether your issue is listed here before contacting the service center.

I can't turn my phone on

If you can't turn your phone on, try the following:

- Press and hold power key for two seconds or longer.
- Check that the battery is fully charged before turning your phone on.
- Press and hold the power button until your phone vibrates.
- Check that your battery is properly connected to your phone, and that the connecting points are clean. If your phone has a built-in battery, contact the service center.

My phone keeps turning off automatically

If you phone keep turning off automatically, try the following:

- Check your battery power. If the power is low, charge your phone.
- Check softwares or applications to see if they are normal. If not, restart your phone.

I can't use an application on my phone

If you can't use an application on your phone, try the following:

- Check if your phone has sufficient storage. Delete some messages from your phone.
- Check if the application is damaged. Uninstall and reinstall the application. If cannot be fixed, try resetting system.
- Chances are that the application is not compatible. Uninstall the application and choose a compatible version.
- Check and enable applications management permissions.

My phone's standby time is too short

If your phone's standby time is too short, try the following:

- Chances are that the battery performance decreases. Contact service center to change the battery.
- If you play games or listen to music for a long period of time, shorten the time.
- If the screen is too bright, adjust the brightness of the screen.
- If the phone is used in weak signal environment, the standby time will be short. Please move to strong signal locations.
- Turn off cellular data, GPS, Bluetooth, Wi-Fi switch when not using them.
- Close the application not used.
- Uninstall the applications not used for a long period of time.

My phone isn't charging properly

If your phone isn't charging properly, try the following:

- Ensure that your phone is charging at a normal temperature.
- Plug the charger into a different socket.
- Recharge your phone for about half an hour.
- Chances are that the battery has a problem. If the battery has been built-in, contact service center.
- Ensure that the charger is not defective. If the charger is defective, replace it.
- If the charger fails to charge, please change or repair it.

Touchscreen error when charging

If there is touchscreen error when charging, try the following:

- If the charging equipment is incompatible with your phone, it may cause some problems. Use charger supplied and stable charging equipment.
- Check whether softwares or applications are normal or not. Restart your phone.

I've forgotten my password

If you forget your password, contact service provider.

My PIN is locked

If you enter wrong PIN three times in a row, contact service provider.

I can't use the Internet or make calls

If you can't use the Internet or make calls, try the following:

- Chances are that signal is too weak. Move to an open area and try again.
- Chances are that the phone is out of service area. Check if the Internet is available.
- Chances are that airplane mode is on. Turn off airplane mode.
- Check if software is abnormal. If so, restart the phone.
- Check if SIM card has failure. If so, check or change SIM card.
- Ensure that the dialing is right.
- Check if cellular data setting has failure. If so, go to Settings to set up cellular data.
- Check if prepaid charge has reached its limit. If so, contact service provider.

My calls don't connect

If your calls don't connect, try the following:

- Check if phone number is too long.
- Ensure international roaming service and international call service

are enabled. If not, contact service provider.




Phone doesn't make a sound when it rings

If your phone doesn't make a sound when it rings, check if silent or vibrate mode is enabled.

Phone



Making calls

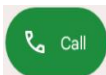To make calls:

- 1 Tap .
- 2 Tap  to enter a phone number.
- 3 Tap  to make a call.

Making calls from contacts


To make calls from contacts:

- 1 Tap .
- 2 Tap  to choose a contact.
- 3 Tap the contact number.

Making calls from recents

To make calls from recents:

- 1 Tap .

2 Tap  to view all calls. Tap the name or number of the person you want to call.

3 Tap  .

Contacts

Importing contacts

To import contacts to your phone:

1 Tap  .

2 Tap  .


3 Tap  .

Creating contacts

To create a new contact:

1 Tap  .

2 Tap  .


3 Enter the contact's name, phone number and other contact information, and then tap  .

Searching for contacts

To search for contacts:

1 Tap  .


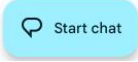

2 Use one of the following search methods:

- Scroll up or down the contacts list.
 - Tap  at the top of the screen to search for a contact.
- 3** Select a contact. You can now call them, send them a text message, or edit their contact information.

Messages


Sending messages

To send messages:

- 1** Tap .
- 2** Tap  to create a message.
- 3** Add recipients and enter a message.
- 4** Tap  to send the message.

Viewing messages




To view messages:

- 1** Tap .
- 2** Select a contact on the message list.
- 3** View your conversation.

Camera






Taking photos

To take photos:

- 1 Tap .
- 2 Swipe to **Capture** on the screen. Spread two fingers apart on the screen to zoom in, and pinch to zoom out.
- 3 Tap  to take a photo. Your picture will be automatically saved to .

Taking panorama


To capture a panorama shot:


- 1 Tap .
- 2 Swipe to **More** on the screen, Tap . Hold your phone steady and then tap  to start shooting. Slowly move your phone in the direction indicated, holding the phone steady and ensuring the arrow stays levels with the center line.
- 3 Tap  when you are finished. Your picture will be automatically saved to .

Recording videos

To record videos:

- 1 Tap .


2 Swipe to **Video** on the screen. Tap  to start recording the video.
Spread two fingers apart on the screen to zoom in, and pinch to zoom out.

3 Tap  to finish recording.

Photos

Viewing photos or videos


To view photos or videos:


1 Tap .

2 Select a photo or a video.

Deleting photos or videos


To delete photos or videos:

1 Tap .


2 Tap the photo or video that you want to delete. Enter its interface and tap .

Sharing photos or videos

To share photos or videos:

1 Tap .

2 Select the photo or video that you want to share.

3 Tap . Select your sharing method.

Chrome

Using Chrome

Connect the web to search for information and bookmark your favorite web pages to access them conveniently.


1 Tap .

2 Enter the address field in the search bar. You will have access to web pages; moreover, bookmarks, multiple window switching and other functions are supported.


Clock

This app includes the following functions:

Alarm

Tap . From the **Alarm** tab, you can do the following steps to set your alarms:


Adding an alarm

Tap  and set the alarm time, repeat times, alarm sound, and others.

Enabling or disabling an alarm

Turn on or turn off the switch next to an alarm.


Configuring the alarm settings

Tap  > **Settings** to configure the alarms.


Deleting an alarm

Tap the alarm that you want to delete. Then tap .

Clock

Tap . From the **Clock** tab, you can do the following steps to set your clock:

Adding a city

Tap . Enter a city name in the search bar or select a city from the list.

 
 
Deleting a city

Select delete city, swipe left or right to delete.

Timer

1 Tap .


 

 
2 Tap **Timer**.

3 Set the countdown time and tap  to start the timer. Tap  to pause the countdown.

Stopwatch

1 Tap .







2 Go to the **Stopwatch** tab.

3 Tap  to start the stopwatch. Tap  to count laps. Tap  to pause the stopwatch. Tap  to reset the stopwatch.




Sound Recorder

The device supports long periods of recording. Make sure your device has available storage before recording.



Recording sound

- 1 Tap .
- 2 Tap  to start recording.
- 3 Tap  to stop recording. Tap , the recording file is automatically saved in the phone. Tap , tap and hold a recording recording file you want to delete, then tap .

Playing a recording

- 1 Tap .
- 2 Tap  to find your recording.
- 3 Tap  to play the recording.


Managing recordings

- 1 Tap .
- 2 Tap .
- 3 Tap and hold a recording. You can rename, share or delete the recording file.


Calculator

Use calculator to do simple or complicated calculations.

Making calculation

Tap , you can do simple calculations:


- Tap the number and calculate sign to do simple calculations.

- Touch  go to advanced calculator tab.

FM Radio

Listening to radio

To use the FM Radio, first you need to connect your headphones.

- 1 Tap  to activate.
- 2 Select the frequency following the app instructions and set the volume to a comfortable level.

Security and Privacy

Fingerprint unlock

Fingerprint unlock helps you unlock your phone faster and can improve security.

Fingerprint sensor is on the side of the phone. See the follow-

ing figure.




Adding a fingerprint

To add fingerprints:

- 1** Tap **Settings > Security > Face & Fingerprint Unlock > Fingerprint.**
- 2** To set a screen lock password, PIN or pattern along with your fingerprint, follow onscreen instructions.
- 3** To set your fingerprint, follow onscreen instructions and put your fingertip on the fingerprint sensor. Press the sensor lightly until your phone vibrates. Repeat using different parts of your fingertip.
- 4** Tap Done. You can now tap the sensor with your fingertip to unlock the screen.

Deleting fingerprint

To delete fingerprints:

- 1** Tap **Settings > Security > Face & Fingerprint Unlock > Fingerprint.**
- 2** Enter your password, PIN or pattern.
- 3** Tap  icon beside the fingerprint you want to delete.

Adding another fingerprint

To add another fingerprint:

- 1 Tap **Settings > Security > Face & Fingerprint Unlock > Fingerprint.**
- 2 Enter your password, PIN or pattern.
- 3 Tap **Add fingerprint.**

Face unlock

Face unlock can be used to unlock your phone.

Adding a face

To add your face:

- 1 Tap **Settings > Security > Face&Fingerprint Unlock>Face Unlock.**
- 2 To set a screen lock Password, PIN or Pattern along with your face, follow the onscreen instructions.
- 3 Tap **Start.** Read the instructions carefully.
- 4 Register your face. You can now use your face to unlock the screen.

Deleting a face

To delete your face:

- 1 Tap **Settings > Security > Face&Fingerprint Unlock>Face Unlock.**
- 2 Enter your Password, PIN or Pattern.

3 Tap **Delete face model**, and then tap **DELETE**.

Safety

This section contains information on the secure and safe operation of your phone.

Safety precautions

For your safety and that of others, ensure you read, understand, and follow all of the information in this section.



Failure to obey the following safety information could result in fire, electric shock, injuries, or damage to your device or other property. Read all the safety information below before using your phone.

- Using unapproved or incompatible power adapters, chargers, or batteries may damage your phone, shorten its lifespan, or cause a fire, explosion, or other hazards.
- Your phone's ideal operating temperature is 0°C to 35°C. Your phone's ideal storage temperature is -20°C to 45°C. The ideal charging temperature for your phone is between 0°C and 40°C.
- Pacemaker manufacturers recommend keeping a minimum distance of 15 cm between phone and pacemaker to prevent potential interference with the pacemaker. If you use a pacemaker,

hold your phone on the side opposite to your pacemaker and do not carry your phone in your front pocket.

- Keep your phone and battery away from excessive heat and direct sunlight. Do not place your phone or battery on or in heating devices, such as microwave ovens, stoves, or radiators.
- Do not use your phone in a moist environment, such as bathroom. Prevent your phone from being soaked or washed in liquid.
- Follow local laws and regulations while using your phone. To reduce the risk of accidents, do not use your wireless phone while driving.
- While flying in an aircraft or immediately before boarding, only use your phone according to instructions provided. Use of a wireless phone in an aircraft may disrupt wireless networks, can cause danger to aircraft operation, and may be illegal.
- To prevent damage to your phone's parts or internal circuits, do not use it in dusty, smoky, damp, or dirty environments or near magnetic fields.
- When charging your phone, plug the adapter into a socket which is near your phone and which is easy to reach.
- When not in use, unplug the charger from outlets and from the phone.
- Do not use, store or transport your phone in areas where flammables or explosives are stored (in a gas station, oil depot, or

chemical plant, for example). Using your phone in these environments increases the risk of explosion or fire.

- Dispose of your phone, battery, and accessories according to local regulations. Do not throw phones or batteries away in your household trash bin or other non-recycling trash bin. Improper battery use or disposal may lead to fire, explosion, or other hazards.
- Consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.
- Obey any rules or regulations set by hospitals and health care facilities.
- Do not crash, throw, puncture, drop, squeeze, or bend your phone.
- Do not try to take apart your phone or its accessories. Only authorized personnel are allowed to service or repair the phone.
- Use a dry soft cloth to clean your phone. Do not use water, alcohol, detergent or any chemicals.
- Keep your phone and charger out of the reach of children. Do not let children use the phone or charger without supervision.
- Phone accessories and phone accessory parts, especially small parts, must also be kept away from children to prevent choking.

- Power off your phone in any area where there is a risk of explosions.
Do not charge your phone or use your phone in areas where there are chemicals or particles in the air. Obey all signs and instructions.
- Strictly obey relevant instructions in this guide while using USB cable. Failure to follow instructions may result in your phone or PC being damaged.
- Only use USB version 2.0. USB equipment with your phone.

Safe cleaning and maintenance

To ensure your safety and that of others, you must pay attention to the following safety tips when cleaning and maintaining your phone:

- Turn off your phone before cleaning and maintenance. Your charger should be unplugged from socket. Your phone and charger should be disconnected to prevent electric shocks or short circuiting.
- Do not wipe your phone or charger with benzyl alcohol, chemical substances, chemical agents or abrasive cleaning agents. This is to avoid damaging phone parts or the functioning of your phone. You may clean your phone with a slightly damp anti-static cloth.
- Do not scrape or alter the phone case, or the paint on the phone, as it may cause allergic reaction. If such reaction occurs, stop using your phone immediately and seek medical help.
- Wipe dust off power plug and keep it dry to avoid risk of fire.

- If your phone or accessories do not work properly, contact your local vendor.
- Do not disassemble device or its accessories by yourself.

Safe battery charging

Follow the information on safe battery charging in the Battery charging, Safety precautions, and Protecting your battery sections of this user manual.

Protecting your hearing



- To prevent possible hearing damage, do not listen at high volume levels for long periods.
- Fully understand user manual before use.
- Ensure your player at low volume levels or power off before you leaving.

Protecting the environment



- Obey the local regulations on device packaging, battery and used device disposal and bring them to the collection point for proper recycling.
- Take your used, unwanted lithium batteries to a designated place. Do not dispose of used devices or batteries in a household rubbish bin.

- Proper collection and recycling of your device help ensure electrical and electronic equipment waste is recycled in a manner that conserves valuable materials and protects human health and the environment.

Specific Absorption Rate(SAR)

- Your phone is tested to comply with applicable requirements and regulations of the European Union of human exposure to radio wave.
- Specific Absorption Rate(SAR) is used to measure radio waves absorbed by a body. The device complies with RF from your body. The SAR limit is 2.0 W/kg averaged over 10 gram of tissue in the European Union.
- This product was tested and recorded the maximum SAR value was 1.063 W/kg for the head, 1.344 W/kg for the body. The device complies with RF specifications when the device used at a distance of 5 mm from your body.
- The actual SAR level will be much lower than above value since the device has been designed to use the minimum energy for necessary communication with the base station.

Reducing your radiation exposure

You can reduce your exposure to radiation from your phone by doing

the following:

- Use your phone in areas with good reception. Be especially careful in underground car parks and on train and car journeys.
- Use your phone when all the signal strength bars are displayed.
- Use a hands-free kit.
- During calls, keep your phone away from your abdomen (for pregnant women) and your lower abdomen (for teenagers).

Other important information

Important data usage and billing information

Your phone regularly connects to mail and Internet servers to improve your experience. This creates data exchanges that may be charged along with your existing package, or which may use prepaid credit.

To avoid billing problems related to Internet services, it is strongly recommended to use a suitable package or plan which includes unlimited Internet and emails and to avoid changing the default settings.

You can connect to Wi-Fi for faster, more streamlined service. If you can, use Wi-Fi for streaming, and for downloading games, videos and films.

Disclaimer

Unofficial headsets, chargers, and other accessories are not compatible with your phone. Using unofficial accessories can affect performance. The factory is in no way responsible for any damage that occurs as a result of using unofficial accessories.

This user manual is intended to provide a general overview. Actual specifications and functions of your phone may be different from those contained in the user manual.

Your phone was fully tested after production. If there are any damages or defects due to manufacturing, follow the terms and conditions in the warranty card.

If there are issues with your phones related to operator features and services, follow the operator terms and conditions.

Note that your phone has specification and function limitations.

These limitations cannot be considered manufacturer damage or as damage or defect of any kind.

Only use your phone for the purposes or functions for which it was designed.

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE

REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD (“AVC VIDEO”) AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

Frequency bands and power

Mode	Frequency Bands	Tune-up Power
GSM850	Tx: 824-849MHz, Rx: 869-894MHz	33±2dBm
GSM900	Tx: 880-915MHz, Rx: 925-960MHz	31.5±2dBm
GSM1800	Tx: 1710-1785MHz, Rx: 1805-1880MHz	30±2dBm
GSM1900	Tx: 1850-1910MHz, Rx: 1930-1990MHz	30±2dBm
WCDMA Band I	Tx: 1920-1980MHz, Rx: 2110-2170MHz	21±2dBm
WCDMA Band VIII	Tx: 880-915MHz, Rx: 925-960MHz	21±2dBm
LTE B1	Tx: 1920-1979MHz, Rx: 2110-2169MHz	22+1dBm
LTE B3	Tx: 1710-1784MHz, Rx: 1805-1879MHz	22+1dBm
LTE B8	Tx: 880-914MHz, Rx: 925-959MHz	22+1dBm
LTE B20	Tx: 832-861MHz, Rx: 791-820MHz	22+1dBm
LTE B28	Tx: 703-747MHz, Rx: 758-802MHz	22+1dBm
LTE B38	Tx: 2570-2619MHz, Rx: 2570-2619MHz	22+1dBm
LTE B40	Tx: 2300-2399MHz, Rx: 2300-2399MHz	22+1dBm
LTE B41	Tx: 2496-2689MHz, Rx: 2496-2689MHz	22+1dBm
WIFI	2412-2472MHz for 802.11b/g/n(HT20) 5170-5835 MHz 802.11ac (20M/40M/80M)	12±3dBm
Bluetooth	2402-2480MHz	≤4dBm
GPS	1575.42MHz Receiving	
FM	87.5~108MHz Receiving	

Compliance



This equipment may be operated in all European countries.

Copyright

Copyright © 2020 Casper

The user manual is protected under international copyright laws.

No part of the user manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Group. Some of the contents of the user manual may not apply to your device, depending on the software and your service provider. All information in this document is subject to change without notice.

EU Declaration of Conformity(DoC)

We,

Hisense International Co., Ltd

hereby, declare that the essential requirements set out in the **RED Directive 2014/53/EU** have been fully fulfilled on our product with indication below:

Product Name: Mobile Phone

Market Model Name: Hisense E70 Pro

Trade Name: Hisense

Model No.: HLTE263E

The following standards have been applied for the investigation of compliance:

ETSI EN 301 511 V12.5.1 (2017-03)

ETSI EN 301 908-1 V15.2.1 (2023-01)

ETSI EN 301 908-2 V13.1.1 (2020-06)

ETSI EN 301 908-13 V13.2.1 (2022-02)

ETSI EN 301 893 V2.1.1 (2017-05)

ETSI EN 300 440 V2.2.1 (2018-07)

ETSI EN 300 328 V2.2.2 (2019-07)

ETSI EN 303 413 V1.2.1 (2021-04)

ETSI EN 303 345-1 V1.1.1 (2019-06)

ETSI EN 303 345-3 V1.1.1 (2021-06)

EN 55032:2015+A1:2020; EN 55035:2017+A11:2020

EN IEC 61000-3-2:2019+A1:2021; EN 61000-3-3:2013+A2:2021

ETSI EN 301 489-1 V2.2.3 (2019-11)

ETSI EN 301 489-3 V2.3.2 (2023-01)

ETSI EN 301 489-17 V3.2.4 (2020-09)

ETSI EN 301 489-19 V2.2.1 (2022-09)

ETSI EN 301 489-52 V1.2.1 (2021-11)

EN 50663:2017

EN 62209-1:2016 EN 62209-2:2010+AMD1(2019)

EN 50360:2017 EN 50566:2017

EN IEC 62368-1:2020+A11:2020

EN 50332-1:2013 EN 50332-2:2013

And apply notified body assessment:

Notified Body number 0700

PHOENIX TESTLAB GmbH

Königswinkel 10

D-32825 Blomberg

Germany

Software Version:	Hisense_HLTE263E_S03_01_01_ZA06
Hardware Version:	A602-MB-V0.1
System Components	
Component 1	Li-ion Battery Model: LPN440490 Rated: 3.85V, 4900mAh, 18.865Wh Typical: 3.85V, 5000mAh, 19.25Wh Shenzhen Aerospace Electronic Co., Ltd.
Optional Components	
Optional 1	AC Adapter 1# Model: TPA-46050200VU Input: 100-240V~ 50/60Hz 0.3A Output: 5.0V 2.0A, 10.0W SHENZHEN TIANYIN ELECTRONICS CO., LTD
Optional 2	AC Adapter 2# Model: TPA-185C050200BU01 Input: 100-240V~ 50/60Hz 0.3A Output: 5.0V 2.0A, 10.0W SHENZHEN TIANYIN ELECTRONICS CO., LTD
Optional 3	Earphone Cable (1.15m, Unshielded, Without Ferrite) Dongguan Keling Electronic Technology Co., LTD
Optional 4	USB Cable (0.8m, Shielded, With Ferrite) Dongguan Keling Electronic Technology Co., LTD

Furthermore, the ISO requirement for the in-process quality control procedure as well as the manufacturing process has been reached. The technical document as well as the test reports will be kept for a period at least 10 years after the last product has been manufactured at the disposal of the relevant national authorities of any Member State for inspection.

Detail contact information for this declaration has been listed below as the window of any issues relevant for this declaration.

Manufacturer Contact

Company: Hisense International Co., Ltd

Address: No.218, Qianwangang Road, Economic and Technological Development Zone, Qingdao, Shandong Province, China

Name & Title: Zhang He/Manager

Tel No.: +86-532-55753718

Fax No.: --

E-mail: zhanghe1@hisense.com



Mark Zhang

2024.1.15